

Eastwood[®]

DO THE JOB RIGHT.[®]

Item #23092

**3W COB LED
360° HEADLAMP
INSTRUCTIONS**



The **EASTWOOD 3W COB LED RECHARGEABLE HEADLAMP** utilizes the latest COB LED technology to achieve a powerful 260 Lumen light output while maintaining the most efficiency possible. The hi-low feature allows a lower light output setting to provide only the light needed to extend battery life. The motion detecting power control setting allows for hands free control of the Headlamp. A lightweight, shock resistant polymer housing provides tactical level reliability. The convenient attaching mount design allows for maximum flexibility and the USB cable facilitates connection to any USB charging source.

CONTENTS

- (1) Eastwood 3W COB LED Rechargeable Headlamp on a magnetic, removable headband mount
- (1) Wall Charger – 120V input, 5.0VDC, 1A output with integral USB port
- (1) 39" [1m] Micro USB Adapter Cord



SPECIFICATIONS

3.7 Volt, 1400mAh, Li-Po, Integral Rechargeable Battery
COB LED, 260 Lumens light output (high), 120 Lumens light output (low)
2 hours working time (high), 4 hours working time (low)
2.5 - hour charge time
Moisture resistant to IP-44 rating
USB capable recharging

SAFETY INFORMATION

The following explanations are displayed in this manual, on the labeling, and on all other information provided with this product:

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING


WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

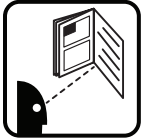

READ INSTRUCTIONS

- Thoroughly read and understand this manual before using.
- Save for future reference.



DANGER

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL ERUPT IN FLAMES OR VIOLENTLY EXPLODE IF NOT PROPERLY HANDLED!



WARNING

SERIOUS INJURY, FIRE, AND EXPLOSION HAZARDS!

- Keep Dry – Do Not open unit, drop, short circuit, incinerate, expose to temperatures greater than 140°F [60°C].
- Do Not charge or use if damaged.
- Do Not submerge lamp.
- Do Not operate in explosive atmospheres such as explosive vapors, flammable liquids, gasses or dust.
- Not a toy. Keep out of the reach of children.
- Charge lamp only according to these instructions.



CAUTION


EYE INJURY HAZARD!

- DO NOT allow LED lamp to project directly into eyes. Temporary blindness may occur.

FEATURES

- Three function Switch (**FIG 1**)
 - Press once and release, On-High Illumination.
 - Press again and release, Low Illumination.
 - Press again and release, Off.

FIG. 1

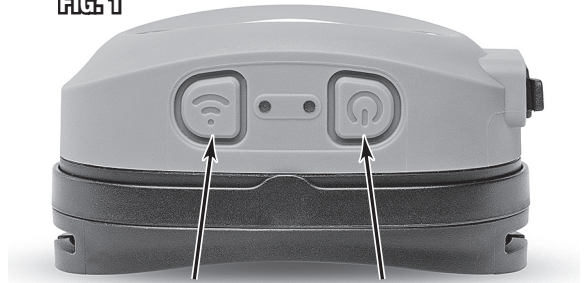

Motion Detector On/Off

On/Off/Brightness

- Motion detecting power control switch (**FIG 1**).
BLUE illuminating LED next to battery power display indicates motion detecting is on.
- Battery power display function (**FIG 1**):
RED illuminating LED indicates low battery;
RED flashing LED indicates battery needs charging;
GREEN illumination indicates full charge.
- Battery charging display function (**FIG 1**):
RED flashing LED indicates charging battery;
GREEN illumination indicates fully charged battery.
- Double Magnetic Base with Swivel Ball Socket.
- Twist lock magnetic headband mount.

OPERATION

- Twist Magnetic Base 90° to the left on the headband base to dismount the Headlamp (FIG. 2).
- Grip the Headlamp housing, separate housing from base and rotate Magnetic Base through 360° in the vertical and 90° horizontally on the Swivel Ball (FIG 3).
- Place the base against any ferrous metal surface for magnetic attachment or attach to headband for use.
- Depress and release Power Button located on top of Housing once for High Brightness and a 2nd time for Low (FIG 1).
- Depress Button once again to turn off.
- Depress and release Button next to Power Button to activate motion detecting power control. Depress a 2nd time to turn off motion detecting and Headlamp (FIG. 1).
- Using the motion detection power control requires an object to pass approximately 2" in front of the lamp (FIG. 4).

▲ NOTICE

The low brightness setting cannot be used when the motion detecting power control is active.



CHARGING

- When the LED power indicator (**FIG 1**) located at the top of the Housing flashes RED, the battery requires charging.
 - Flip up rubber seal and plug the Micro USB terminal of the included Adapter Cord into the Micro USB port (**FIG 5**).
 - Plug the opposite end of the cord into the included Wall Charger or any suitable USB port.
 - Plug wall unit into properly grounded 120 VAC, 60 Hz. outlet
 - Allow 2.5 hours for full charge.
 - The indicator LED at the top of the Housing will flash RED while charging then illuminate GREEN to indicate full charge (**FIG 1**).
 - Close Charging Port Cover to maintain IP-44 rating.



▲ NOTICE

Batteries will automatically discharge without use and must be charged every 3 months even if the light has not been used.

Do Not charge batteries in temperatures below 40°F [4.4°C].

If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.343.9353 >> email: tech@eastwood.com

PDF version of this manual is available at eastwood.com

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

800.343.9353 eastwood.com