

Eastwood

DO THE JOB RIGHT.

Item #30540

WORKBENCH STOOL

INSTRUCTIONS



The **Eastwood Workbench Stool** is designed with strong steel tubing and a foam padded seat with durable vinyl covering to provide years of reliable service.

INCLUDES



- | | | |
|-----------------------|------------------------------------|------------------|
| (2) Steel Tube Legs | (1) Vinyl Covered Foam Padded Seat | (4) Short Bolts |
| (1) Foot Rest Ring | (4) Long Bolts | (8) Flat Washers |
| (1) Swivel Seat Mount | (4) Medium Bolts | |

ASSEMBLY

Tools needed (not included): A phillips or flathead screwdriver and an adjustable wrench.

1. Both steel tube legs should be assembled at the pinched upper portions and nested comfortably together (**Fig A**).
2. Then install the foot rest ring over the steel tube assembly until all four bolt holes line up with the legs and foot rest ring (**Fig B**).
3. Slide the four long bolts into the holes from the foot rest ring side and through each one of the steel tube legs. Place one washer and one nut on the back of each of the four bolts. Do not tighten completely at this time (**Fig B**).
4. Next, take the swivel seat mount and insert the medium length screws through the four holes in the mount and into the four holes on the seat frame. **NOTE:** You will need to have the swivel seat mount upper and lower portions out of phase to install the bolts correctly (**Fig A**).
5. Install one washer and one nut on each bolt. Tighten all four bolts on the swivel seat mount and then tighten all four bolts on the foot rest rings as previously installed in step three (**Figs A & B**).
6. Take the vinyl-covered seat and lay it upside down on the floor. Take the seat frame and line up the holes to the swivel seat mount to the seat. Install all four bolts and tighten. There are no washers needed in this step (**Fig A**).

Your Eastwood Workbench Stool is now ready for use.

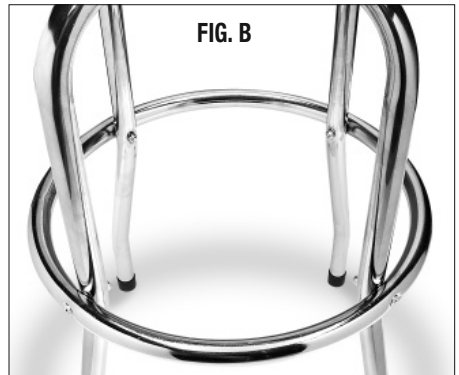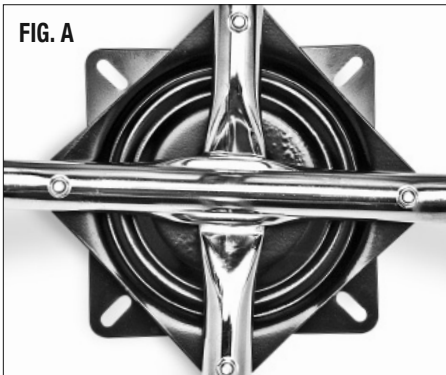

If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.544.5118 >> email: techhelp@eastwood.com

PDF version of this manual is available online >> eastwood.com/30540manual

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

US and Canada: 800.345.1178 Outside US: 610.718.8335

Fax: 610.323.6268 eastwood.com

© Copyright 2014 Easthill Group, Inc. Instruction part #30540Q Rev. 7/14