

Eastwood[®]

DO THE JOB RIGHT.[®]

Item #54825

AIR TOOL RACK

INSTRUCTIONS



The **EASTWOOD AIR TOOL RACK** will neatly hold 10 full-size air tools. Constructed of heavy 14 gauge (2mm) steel and coated with a tough powder coated finish, it is designed for years of service.

SPECIFICATIONS

Mounting Base Plate Hole Pattern: 2 x 1/4" [0.63mm] diameter holes @ 16" [406.4mm] on center

Weight Capacity: 50 lb. [22.6kg]

Powder Coated Finish

SAFETY INFORMATION

The following explanations are displayed in this manual, on the labeling, and on all other information provided with this product:

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING


WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

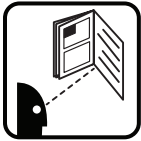

READ INSTRUCTIONS

- Thoroughly read and understand this manual before using.
- Save for future reference.



WARNING EXPLOSION HAZARD!

- Check for possible interference with electrical lines, other utilities or other unseen obstructions before mounting.



WARNING INJURY HAZARD!

- Do not mount in a location where the Air Tool Rack may become an obstruction where head or bodily contact could cause injury.

CAUTION INJURY HAZARD!

- This unit must be securely mounted to prevent falling which can cause personal injury and property damage.

INSTALLATION

- This unit must be securely mounted on a wall, cabinet, workbench etc, capable of holding 50lbs. [22.6.3kg.] plus pulling stresses from operation. The use of 1/4" screws with substantial washers and attachment to a structural member is highly recommended.
- If placing unit on a studded wall, attach to studs using pre-punched, 16" spaced holes as a guide.
- If attaching to a solid concrete or hollow block wall, the use of the proper anchors is required.
- For less secure mounting surfaces, or other than 16" stud spacing, the use of a 1" x 12" x 36" backer board affixed to the wall is suggested as a mounting surface.

USE

- Using the turned section of standard 1/4" male quick-disconnect air fittings, commonly attached to air tools (not included), slip the fittings over the raised edges and into the slots of the Air Tool Rack. Allow the air tools to hang by the fittings (**FIG 1**).



If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.343.9353 >> email: tech@eastwood.com

PDF version of this manual is available at eastwood.com

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

800.343.9353 eastwood.com