

Eastwood Elite Hotcoat PCS-1000 Quick Set Up Guide



Initial: “Quick set up Guide”

Using 5lb hopper:

1. Set Incoming air pressure regulator to 40-50 psi
2. Turn booth regulator knobs: counter- clockwise
3. Assure black hose from back of unit marked “Air Output Fluidizer” is going to hopper “bottom” fitting
4. Assure black hose from back of unit marked “Air Output Gun” is going to aluminum block on hopper lid
5. Fill hopper with 1-2 lbs. of powder
6. Do not put lid on hopper:
 - Adjust voltage to 1
 - Pull Gun trigger and hold
 - Slowly turn “Fluidizing” regulator clockwise until you see powder “boiling” in hopper
 - *Do not worry about pressure gauge reading, focus on watching powder in hopper*
7. Now the fluidizing pressure is set, put lid on hopper.
8. Point gun toward object:
 - Adjust voltage to 4
 - Pull Gun trigger and hold
 - Slowly turn “Gun Air” regulator clockwise until the desired amount of powder is flowing from gun