

*Eastwood*

DO THE JOB RIGHT.

Item #15964

# MASKING STATION

## INSTRUCTIONS




Masking paper & tape sold separately

The **EASTWOOD MASKING STATION** makes it easy to mask projects for paint and body work. With a capacity for two 18" and two 12" paper rolls, this Masking Station will be handy for all projects big and small.

## INCLUDES

- (2) Long Paper Holders (A)
- (2) Short Paper Holders (B)
- (1) Axle Assembly (C)
- (1) Frame Upright (D)
- (1) Frame Support (E)
- (1) Leg Support (F)
- (2) Long Cutting Blades (G)
- (2) Short Cutting Blades (H)
- (2) Wheels (I)
- (4) Tape Reels (J)
- (8) Locking Bushings (K)
- (8) Paper Tension Springs (L)
- (8) Paper Washers (M)
- (21) Nuts (N)
- (21) Washers (O)
- (9) M6X35 Bolts (P)
- (8) M6X30 Bolts (Q)
- (4) M6X40 Bolts (R)
- (4) Wheel Washers (S)
- (2) Cotter Pins (T)
- (2) Long Springs (U)
- (2) Short Springs (V)

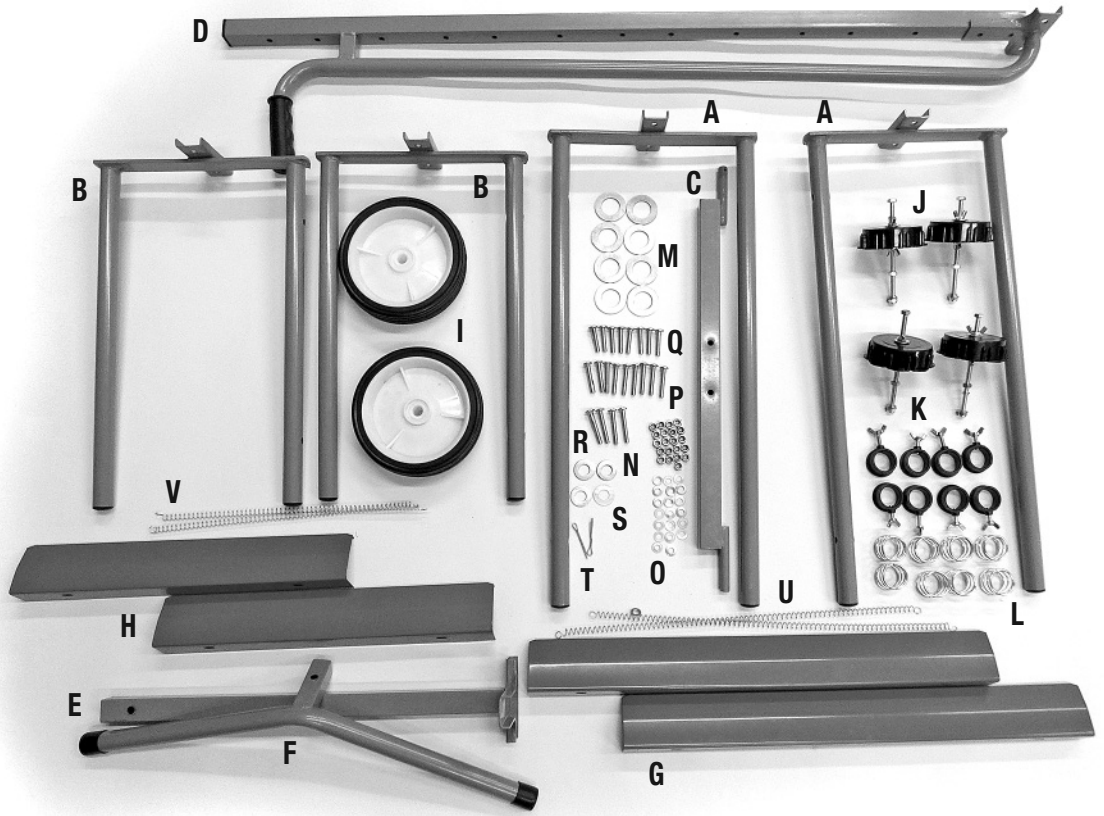


## SAFETY INFORMATION

In this manual, on the labeling, and all other information provided with this product:

### **⚠ WARNING**

WARNING indicates a hazardous situation which, if not avoided, will result in death or serious injury.

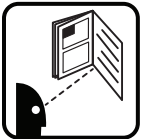

### **⚠ READ INSTRUCTIONS**


Thoroughly read and understand this manual before using the Masking Station. Save for future reference.



### **⚠ WARNING CUT HAZARD**

Serrated paper cutting blade is sharp and can cut skin. Use caution.

# ASSEMBLY

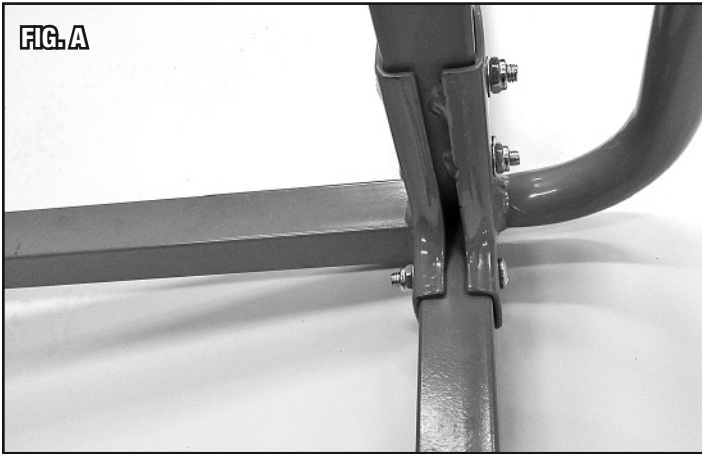

1. Assemble Frame Support, Axle Assembly and Frame Upright using (4) M6X40 Bolts, Washers and Nuts (**FIG A**).
2. Insert Leg Support into Frame Support and secure using (1) M6X35 Bolt, Washer and Nut (**FIG B**).



3. Install Wheels onto the Axle Assembly ensuring that there is a Washer on each side of the Wheel. Secure using a Cotter Pin (**FIG C**).
4. Install Paper Holders onto the Frame Upright using M6X35 Bolts, Washers, and Nuts. Begin with the Long Paper Holders on the bottom and then move to the Short Paper Holders on top. Ensure that each Paper Holder has a Bolt hole below it for installation of a Tape Reel (**FIG D**).



5. On the bar of each Paper Holder that is NOT drilled for a Cutting Blade, install the Locking Bushings, Paper Tension Springs and Paper Washers in the order shown (**FIG E**).
6. Install pre-assembled Tape Reels onto the Frame Upright.
7. Install the Long and Short Cutting Blades onto their appropriate Paper Holders using M6X30 Bolts, Washers and Nuts. Once installed attach the Springs (**FIG F**). The Masking Station is now ready for use.

# INSTALLING PAPER AND TAPE



1. Push Tape onto the Tape Reel ensuring that the Tape is evenly seated on the Reel.
2. Load paper and secure with Locking Washer, Spring, and Locking Bushing (**FIG G**).
3. Pull paper through Spring, then adhere tape to paper and continue pulling until you have tape and paper through the Spring (**FIG H**).

## ADDITIONAL ITEMS

- #15294 18" Norton Masking Paper
- #15293 12" Norton Masking Paper
- #51512 3/4" Norton Yellow Crepe Tape

---

**If you have any questions about the use of this product, please contact**

The Eastwood Technical Assistance Service Department: 800.544.5118 >> email: [techelp@eastwood.com](mailto:techelp@eastwood.com)  
PDF version of this manual is available online >> [eastwood.com/15964manual](http://eastwood.com/15964manual)

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA  
US and Canada: 800.345.1178 Outside US: 610.718.8335  
Fax: 610.323.6268 [eastwood.com](http://eastwood.com)