


Item #55264



4 PC

INTERGRIP PANEL CLAMP SET

- Perfectly Align Panels
- Easy 3-Step Process
- Creates the Proper 0.040" Gap for Proper Butt Welds

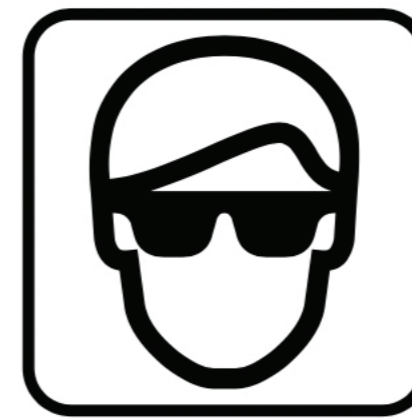

Instructions:

1. Loosen Wing Nut and remove Square Keyway.
2. Install Intergrip between two panels to be butt welded.
3. Re-install Square Keyway and tighten Wing Nut.

NOTE: Do not weld within 1" of tool as you can warp and bind the tool.



WARNING:
Cancer and Reproductive Harm –
www.P65Warnings.ca.gov



6 07174 15791 4

Made In China Rev 2