

Eastwood[®]

DO THE JOB RIGHT.[®]

Item #32409

QUICK CHANGE WORKLIGHT SYSTEM INSTRUCTIONS



The **EASTWOOD WORKLIGHT SYSTEM** features a Power Unit with 3 interchangeable COB LED Light attachments and a convenient USB type compact charger. A quick change, turn and lock design allows switching of attachments in just seconds. The handgrip style base features a thumb control switch with a strong magnetic base and a retractable 360° swivel hook.

CONTENTS

- (1) Eastwood Quick Change Power Unit with Magnetic Base and Swivel Hook
- (1) Wall Charger – 120V input, 5 Volt, 1.0 amp USB output
- (1) 39" [1m] USB to Micro USB cord
- (1) Focusable, Multi-Brightness, Swiveling Spot Light Attachment
- (1) Swiveling, Multi-Brightness, Light Bar/End Light Attachment
- (1) 14" Flexible Attachment



SPECIFICATIONS

18650 type, Li-ion, 3.7V, 2600mAh, Li Ion Integral Rechargeable Battery.

4 -hour charge time.

Light Output: Spot Light Attachment: 300 Lumens/160 Lumens

Light Output: Flat LED Bar Attachment: 600 Lumens/300 Lumens

Light Output: Flexible Attachment: 80 Lumens

Runtime: Spot Light Attachment: 3.5 Hrs. / 6.5 Hrs.

Runtime: Flat LED Bar Attachment: 2 Hrs. / 3.5 Hrs.

Runtime: Flexible Attachment: 10 Hrs.

SAFETY INFORMATION

The following explanations are displayed in this manual, on the labeling, and on all other information provided with this product:

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING


WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

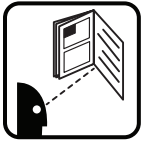

READ INSTRUCTIONS

- Thoroughly read and understand this manual before using.
- Save for future reference.



CAUTION EYE INJURY HAZARD!

- DO NOT allow the Eastwood Quick Change lights to project directly into eyes. Temporary blindness may occur.
- Never operate or store Lamp in damp or wet conditions.



CAUTION FIRE HAZARD!

- Do not cover Spotlight while in operation as it does generate heat.




NOTICE

- Only mount on stable surfaces hang from secure location.
- Keep work light away from excessive heat sources to avoid damage to light.

SET-UP

- Grip the Power Unit firmly, align the two bayonet pins of the selected accessory with the two notches of the Power Unit then push inward firmly and turn the Lock Collar of the accessory 5° Clockwise until it locks (**FIG 1**).
- To remove accessory, tightly grip the Power Unit and the Lock Collar of the accessory, push in and turn 5° Counter-Clockwise to release bayonet pins.

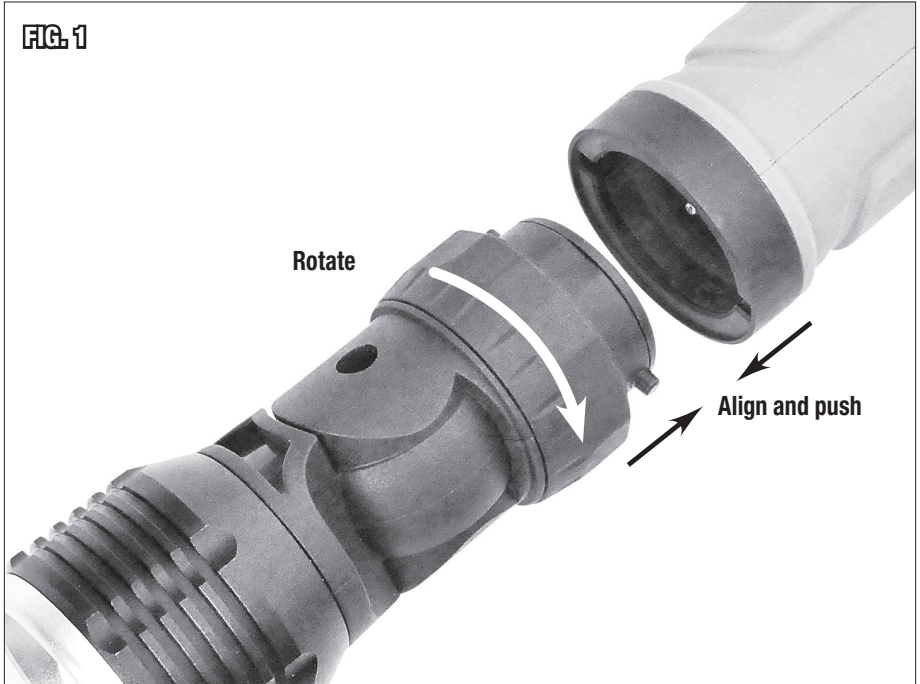

OPERATION

SPOT LIGHT

- 3 Switch Modes: On/Off - Brightness
 - Press once and release, ON - High Illumination.
 - Press and release, Low Illumination.
 - Press and release, OFF.
- Beam Focus
 - Pull Collar outward to reduce beam size.
 - Push Collar in to increase beam size.
- Positioning
 - Position straight or rotate through 180° angle and 360° Swivel.

LIGHT BAR/FLASHLIGHT

- 4 Switch Modes: On/Off – Brightness & Flashlight
 - Press once and release, Light Bar ON - High Illumination.
 - Press and release, Light Bar – Low Illumination.
 - Press and release again, Light Bar – OFF/Flashlight – ON.
 - Press and release, OFF.
- Positioning
 - Position straight or rotate through 180° angle and 360° Swivel.

FLEXIBLE ATTACHMENT


- 2 Switch Modes: On/Off
 - Press once and release, ON.
 - Press and release, OFF.
- Positioning
 - Bend as needed to conform to desired configuration.

POWER UNIT MOUNTING

- Handheld, Flat Surface, Magnetic Attachment or Hanging
 - Hold in hand as a standard flashlight.
 - Set flat base on horizontal surface.
 - Set against any position, flat ferrous metal surface for Magnetic attachment.
 - Pull hook from base for 360° hanging position.

CHARGING

- Push ON/OFF Button partially to obtain a battery power level reading (**FIG 2**). When fully charged, three Green and one Amber indicator lamp will illuminate. The number of illuminated LED's will decrease from four to one as the charge depletes.

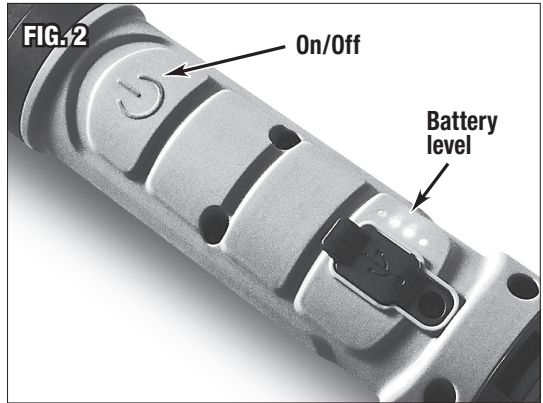

- When the Lamp fails to illuminate and/or the 4 (Green and Amber) LED charge level indicators at the rear of the Power Unit do not illuminate, a charge is required.

- Flip up rubber seal and plug the Micro USB terminal of included Wall Charger into rear of Power Unit (**FIG 3**).
- Insert the USB plug into the USB port of the Wall Charger.
- Plug wall unit into properly grounded 120 VAC, 60 Hz. Outlet.
- Amber and Green LED's will illuminate and a Green one will flash to indicate charging (**FIG 3**).
- Allow 4 hours for full charge.
- The array of 4 LED's at the rear of the Housing will all illuminate to indicate full charge.
- Close the rubber Charging Port Cover.



CHARGING WHILE IN USE

▲ NOTICE

The Lamp may be used while charging, however it will greatly extend the required charging time.

If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.343.9353 >> email: tech@eastwood.com

PDF version of this manual is available at eastwood.com

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

800.343.9353 eastwood.com