

ROCKWOOD®

Item #31537

USB BORESCOPE CAMERA INSTRUCTIONS



The **ROCKWOOD BORESCOPE CAMERA** features adjustable LED illumination, a 6.5' flexible cable, color video and recording capability. Compact Camera head size allows access to tight areas while the wide-angle 60° viewing area and a 45° Mirror attachment provide a panoramic field of vision.

INCLUDES:

- (1)** Camera/Cable/USB Connection
- (1)** Attachment Ferrule
- (1)** 45° Mirror Attachment
- (1)** Magnet Attachment
- (1)** "Fishhook" Attachment
- (1)** Software Mini-CD




SPECIFICATIONS:

Sensor size:	1/9" CMOS
Head outer diameter:	0.35" (9mm)
Pixels:	2MP
Resolution:	1600x1200
Color:	24 bit
Exposure control:	Auto
White compensation:	Auto
Focal distance:	1.5"-2.38"(3-10cm)
Viewing angle:	60 degrees
Illumination:	6 LED w/ adjustable brightness
Operating temp.:	Up to 140°F (60° C)
Waterproof level:	IP67
I/O interface:	USB 2.0
Operating systems:	Windows XP, Vista, Windows 7, 8 & 10, Linux
Video format:	AVI
Photo format:	JPEG
Cable length:	6.5' (2m)

ASSEMBLY:


The Camera may be used as is or with several included attachments. **NOTE:** The Mirror attachment is shipped with a protective film over it. This film **MUST** be removed before use.

- To add attachments, slip the Ferrule over and beyond the Camera body onto the cable.
- Place the attachment of choice along the Camera body with the hook facing inward.
- Slide the Ferrule back up along the Camera body with the notch aligned with the kink in the attachment rod (FIGS 1, 2, 3).

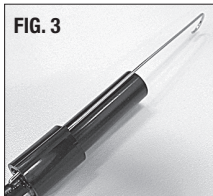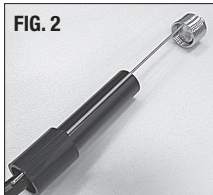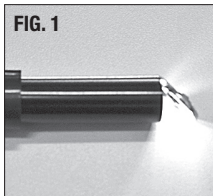

OPERATION:

- Using the included Mini-CD, load the Camera software into a computer.
- As the software menu appears; choose “Software for Normal USB Endoscope”.
- Plug USB terminal of Camera Cable into Computer.
- To view instantly, select: “amcap.exe”
- To capture video, select: “ViewPlayCap.exe”.
- For Windows 10 users, select: Software for Windows 10”.
- Additional detailed information may be found by selecting: “USB Wire Endoscope Manual”.
- The LED illumination can be brightened, dimmed or turned off by using the Thumbwheel located on the side of the USB Plug (**FIG 4**).

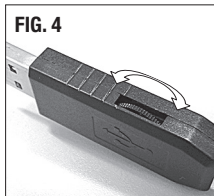

If you have any questions about the use of this product, please contact
The Eastwood Technical Assistance Service Department: 800.544.5118
email: techhelp@eastwood.com
PDF version of this manual is available online: eastwood.com/31537manual

The Eastwood Company
263 Shoemaker Road, Pottstown, PA 19464, USA
US and Canada: 800.345.1178 Outside US: 610.718.8335
Fax: 610.323.6268 eastwood.com