

Eastwood

DO THE JOB RIGHT.

Part #31608

EASTWOOD 5" PAINTLESS DENT REMOVAL SUCTION CUP INSTRUCTIONS



The **Eastwood 5" Vacuum Cup** is an excellent solution for pulling out minor dents in auto body sheetmetal or handling difficult to grip items such as body panels and glass.

SAFETY INFORMATION

The following explanations are displayed in this manual, on the labeling, and on all other information provided with this product:

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING


WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

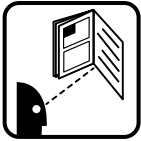

READ INSTRUCTIONS

Thoroughly read and understand these product instructions before using this 5" Vacuum Cup.

- Keep these product instructions for future reference.



WARNING FALL HAZARD!

- Parts may suddenly release while being pulled. Failure to ensure proper footing can quickly result in a fall which could inflict serious personal injury or property damage



CAUTION INJURY HAZARD!

- **DO NOT** use the 5" Vacuum Cup to support the weight of a person or valuable property as serious injury or property damage may occur.
- **DO NOT** exceed 65 lbs. of lifting or pulling capacity as serious injury or property damage may occur.

NOTICE

- Use Vacuum Cup only on clean, smooth, non-porous and non-textured surfaces.

ASSEMBLY

- Unthread Knob from threaded post at top of Vacuum Cup, place selected Eyelet over threaded post and tighten Knob securely

OPERATION

- Place Rubber Vacuum Cup against a clean, smooth, non-porous or non-textured surface.
- Depress the grey Plunger fully and repeatedly until it stays in and the red line is no longer visible.
- Suction cup is now ready to be used. **DO NOT** exceed 65 lbs. of lifting or pulling capacity as serious injury or property damage may occur.
- Release vacuum by pulling up rubber tab at the edge of the Cup.
- Always store with the Rubber Cup nested in the Protective Plastic Base.

If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.544.5118 >> email: techelp@eastwood.com

PDF version of this manual is available online >> eastwood.com/31608manual

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

US and Canada: 800.343.9353 outside US: 610.718.8335

Fax: 610.323.6268 eastwood.com