


Eastwood[®]

DO THE JOB RIGHT.[®]

Item #16185


PAINTLESS DENT REMOVAL LINE BOARD INSTRUCTIONS

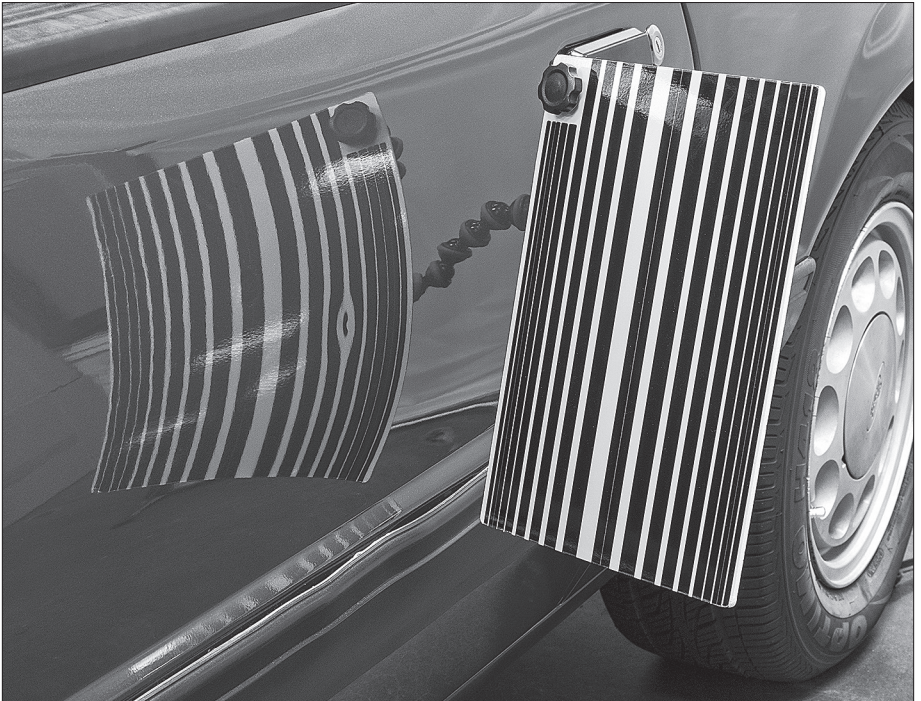

The **EASTWOOD PAINTLESS DENT REMOVAL LINE BOARD** relies on precision aligned, high-contrast reflection lines to provide a clear outline of minor metal dings and damage for removal. The suction-cup base, with a positive locking “gooseneck”, allows solid, vibration free mounting on any smooth body surface.

CONTENTS

- (1) 8-3/8” x 11-1/4”, High Contrast, Laminated Line Board
- (1) 16” positionable, “Gooseneck” Support with quick-release Suction Cup base and head

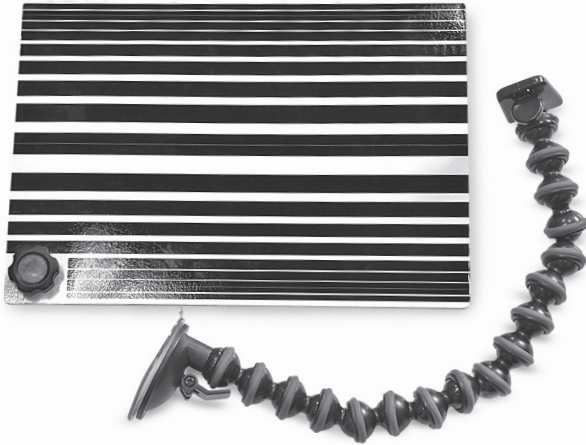

PREPARATION



- Prepare the area for Line Board Support Suction Cup mounting by removing all traces of dirt.

▲ NOTICE

The painted surface to be repaired MUST have a high gloss finish capable of producing a clear reflection of the Line Board. Any dull, flat or low gloss finish will not work.

LINE BOARD MOUNTING PROCEDURE

- Place the Suction Cup base on a body surface 6" to 12" adjacent to and beyond the damaged area (**FIG 1**).
- Bend the "Gooseneck" around so that the "U" shaped receptacle on the end is positioned with the open end upward (**FIG 1**).
- Slip the "Shoe" of the Line Board into the "U" shaped receptacle of the Gooseneck receptacle (**FIG 2**). Tighten the Shoe Lock Knob to finger tight.
- Position the Line Board at such an angle that you can see the High-Contrast Lines in the reflection (**FIG 3**).

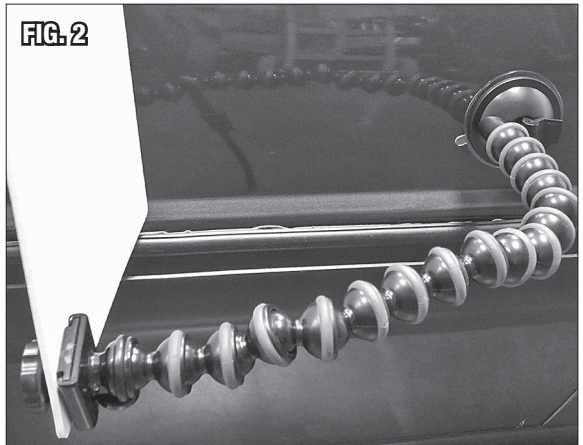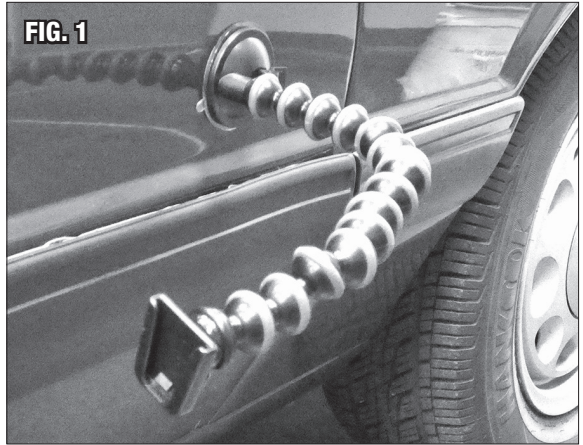

LINE BOARD USE

- The Line Board is properly used by "reading" the reflection of the High Contrast lines in the body panel surface (**FIG 3**). The profile of any dings or minor damage will be clearly outlined by appearing as curved lines in the reflection. As the damage is worked on and reduced, the reflected lines will illustrate the progress.



ADDITIONAL ITEMS

- #16145 Eastwood Paintless Dent Removal Kit
- #31608 Eastwood 5" Paintless Dent Removal Suction Cup
- #10041Z Eastwood PRE Painting Prep
- #16143 Tru Power Microfiber Towel

If you have any questions about the use of this product, please contact

The Eastwood Technical Assistance Service Department: 800.343.9353 >> email: techhelp@eastwood.com

PDF version of this manual is available at eastwood.com

The Eastwood Company 263 Shoemaker Road, Pottstown, PA 19464, USA

800.343.9353 eastwood.com